


 
 
 
 
 
 



 
 
 




| Original | Sustituto |
|---|----------------------|
|  | Power |
|  | Mute / Dimmer |
|  | Info / Angle |
|  | SHIFT + INFO / Angle |
|  | Picture / Format |
|  | Zoom / Size |
|  | Smart / List |
|  | Sound / Title |
|  | Setup / OPT / |
|  | Menu / Home |
|  | 1 |
|  | 2 |
|  | 3 |
|  | 4 |
|  | 5 |
|  | 6 |
|  | 7 |

| Original | Sustituto |
|---|--------------------------------------|
|  | 8 |
|  | 9 |
|  | Sleep / Timer |
|  | 0 |
|  | SHIFT + TEXT / Text / |
|  | Rec / Rec Mode |
|  | Stop / Hold |
|  | Subtitle / EQ |
|  | Audio / Lang I/II |
|  | << / Tune- |
|  | >> / Tune+ |
|  | SHIFT + YouTube / Yellow / YouTube / |
|  | SHIFT + APP / Green / APP / |
|  | >>I / Preset+ |
|  | Vol+ |
|  | Play / Slow |
|  | Vol- |





| Original | Sustituto | Original | Sustituto |
|--|---|----------|-----------|
|  I<</Prev |  I<< / Preset- | | |
|  Home |  D.Menu / Top | | |
|  Up |  Up | | |
|  X/Return |  Back / Return | | |
|  Left |  Left | | |
|  Enter |  OK | | |
|  Right |  Right | | |
|  Select |  Fav / Marker / PC | | |
|  Down |  Down | | |
|  Wuaki TV |  Display / Media | | |
|  Red |  Red / Netflix / Search | | |
|  Green/EPG |  Green / APP / Repeat | | |
|  Green/EPG |  Guide / EPG / -/-- | | |
|  Yellow/TTX |  Yellow / YouTube / Repeat | | |
|  Yellow/TTX |  Text / Goto | | |
|  Blue |  Blue / Prime Video / Random | | |

| Original | Sustituto |
|----------|-----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

