 

 


 

 



Original	Sustituto
 Open/Close	 Eject / Surround
 Standby	 Power
 Info	 Info / Angle
 1	 1
 2	 2
 3	 3
 Prog/Direct	 TV/Radio /
 4	 4
 5	 5
 6	 6
 Clear	 Exit / Cancel / Clear
 7	 7
 8	 8
 9	 9
 Call	 Text / Goto
 +10	 Guide / EPG / -/-
 0	 0

Original	Sustituto
 Search	 Red / Netflix / Search
 Dimmer	 Mute / Dimmer
 Input Up AMP	 CH+ / Page+
 Power AMP	 Shift + Power
 Mute AMP	 Shift + Mute / Dimmer
 Vol+ AMP	 Vol+
 Input Down	 CH- / Page-
 Vol- AMP	 Vol-
 Top Menu	 D.Menu / Top
 Up	 Up
 PopUp Menu	 Smart / List
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Setup	 Setup / OPT /





Original	Sustituto
 Open/Close	 Eject / Surround
 Standby	 Power
 Info	 Info / Angle
 1	 1
 2	 2
 3	 3
 Prog/Direct	 TV/Radio /
 4	 4
 5	 5
 6	 6
 Clear	 Exit / Cancel / Clear
 7	 7
 8	 8
 9	 9
 Call	 Text / Goto
 +10	 Guide / EPG / -/--
 0	 0

Original	Sustituto
 Search	 Red / Netflix / Search
 Dimmer	 Mute / Dimmer
 Input Up AMP	 CH+ / Page+
 Power AMP	 Shift + Power
 Mute AMP	 Shift + Mute / Dimmer
 Vol+ AMP	 Vol+
 Input Down	 CH- / Page-
 Vol- AMP	 Vol-
 Top Menu	 D.Menu / Top
 Up	 Up
 PopUp Menu	 Smart / List
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Setup	 Setup / OPT /



