 










 
 

 
 
 
 



 
 

 









Original	Sustituto
 Power	 Power
 Mute	 Mute
 Tv/Radio	 TV/R
 FAV	 Pre Ch
 World/Internet	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 LIB	 List
 P:P	 AV

Original	Sustituto
 Music/Photo/Cam	 3D
 EPG	 Guide
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Exit	 Exit
 Info	 Info
 Back	 Back
 Menu	 Menu
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Stop	 Stop
 Play	 Play





Original	Sustituto	Original	Sustituto
 Rec	 Rec		
 Pause	 Pause		
 >>	 >>		
 <<	 <<		
 Text	 Text		
 Subt.	 Subt		
 Audio	 Dual		
 OPT	 Options		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

