



Original	Sustituto
	Mute / Dimmer
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Menu / Home
	0
	Exit / Cancel / Clear
	Up
	CH+ / Page+
	Vol-

Original	Sustituto
	Left
	OK
	Vol+
	Right
	CH- / Page-
	Down
	Guide / EPG / -/--
	Red / Netflix / Search
	Text / Goto
	Blue / Prime Video / Random
	Audio / Lang I/II
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Subtitle / EQ
	Info / Angle
	Fav / Marker / PC
	Tv/Radio /





Original	Sustituto
VIDEO	SHIFT + VIDEO 4 Shift + 4
SCAN	RDS AV INPUT AV / Input / RDS
RECORD	REC MODE Rec / Rec Mode
DEVICE	LIBR SMART Smart / List
FILE	MEDIA DISPLAY Display / Media
ZOOM	SIZE ZOOM Zoom / Size
PREV	PRESET- I << / Preset-
NEXT	PRESET+ >> I / Preset+
ROLL	TITLE SOUND Sound / Title
▶/	SLOW Play / Slow
▶/	STEP-FREEZE Pause / Step / Freeze
<<	TUNE- << / Tune-
>>	TUNE+ >> / Tune+

Original	Sustituto

