 











 











 

 

 



 

 



 

 

 



 

 

 



 



 

 


 




 

 








 





 

 



 



 

 







Original		Sustituto		Original		Sustituto	
	Power		Power		Exit		Exit / Cancel / Clear
	Mute		Mute / Dimmer		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Vol+		Vol+
	4		4		Vol-		Vol-
	5		5		Left		Left
	6		6		OK		OK
	7		7		Tv/Rad		TV/Radio /
	8		8		Page Up		CH+ / Page+
	9		9		Page Down		CH- / Page-
	0		0		HDMI/RES		Shift + 0
	FAV		Fav / Marker / PC		HDMI/RES		AV / Input / RDS
	Info		Info / Angle		Ratio		Picture / Format
	Menu		Menu / Home		Red		Red / Netflix / Search
	Back		Back / Return		SOS		D.Menu / Top
	EPG		Guide / EPG / -/--		SUB		Subtitle / EQ





Original	Sustituto	Original	Sustituto
 LANG Green	 APP REPEAT Green / APP / Repeat		
 LANG Lang.	 LANG I/II AUDIO Audio / Lang I/II		
 Yellow	 YouTube REPEAT A-B Yellow / YouTube / Repeat		
 TXT Blue	 Prime Video RANDOM Blue / Prime Video / Random		
 TXT TXT	 GOTO TEXT Text / Goto		
 TIMER Timer	 TIMER SLEEP Sleep / Timer		
 MEDIA Media	 MEDIA DISPLAY Display / Media		
 Rec	 REC MODE Rec / Rec Mode		
 LIST USB/List	 LIST SMART Smart / List		
 Play	 SLOW Play / Slow		
 Pause	 STEP-FREEZE Pause / Step / Freeze		
 Stop	 HOLD Stop / Hold		
 >>	 TUNE+ >> / Tune+		
 <<	 TUNE- << / Tune-		
 >>	 PRESET+ >>  / Preset+		
  <<	 PRESET-  << / Preset-		
 Nothing	 OPT-TOOLS SETUP Setup / OPT /		

