




Original	Sustituto
Standby	Power
Eject	Eject / Surround
1	1
2	2
3	3
Subtitle	Subtitle / EQ
4	4
5	5
6	6
Mute	Mute / Dimmer
7	7
8	8
9	9
Goto	Text / Goto
+10	Guide / EPG / -/--
0	0
Clear	Exit / Cancel / Clear

Original	Sustituto
Audio	Audio / Lang I/II
OSD	Display / Media
Angle	Shift + Info / Angle
Zoom	Zoom / Size
Return	Back / Return
Title	Sound / Title
Up	Up
Menu	Menu / Home
Left	Left
Select	OK
Right	Right
Setup	Setup / OPT /
Down	Down
PSM	TV/Radio /
Play	Play / Slow
Stop	Stop / Hold
Pause/Step	Pause / Step / Freeze





	Original	Sustituto		Sustituto
	<<	 << / Tune-		
	>>	 >> / Tune+		
	l<<	 l<< / Preset-		
	>>l	 >>l / Preset+		
	Slow	 +  Shift + Play /		
	Repeat	 Green / APP / Repeat		
	A-B	 Yellow / YouTube / Repeat		
	P/N	 D.Menu / Top		
	Key L	 CH+ / Page+		
	Key #	 CH- / Page-		
	Vol-	 Vol-		
	Vol+	 Vol+		
	Info	 Info / Angle		
	Keyboard	 Smart / List		
	IS	 Fav / Marker / PC		
	PS	 Picture / Format		

Original	Sustituto

