

 
 

 
 





 


 


 

 


 





 
 



 

 

 

 




Original	Sustituto
	 Power
	 Menu
	 D. Menu
	 Exit
	 Back
	 Red
	 Green
	 Yellow
	 Blue
	 Ok
	 Up
	 Down
	 Right
	 Left
	 Mute
	 Vol +
	 Vol -

Original	Sustituto
	 Ch +
	 Ch -
	 Info
	 Shift + Options
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Pre Ch
	 TV/R
	 Text





Original	Sustituto	Original	Sustituto
 */o..	 Eject		
 Source/Game	 AV		
 */o	 List		
 World	 Guide		
 Music/Movie/Phot	 Options		
 [-O-]	 Sleep		
 [≡]..	 Subt		
 Lang	 Dual		
 Rec	 Rec		
 Stop	 Stop		
 Pause	 Pause		
 Play	 Play		
 >>	 >>		
 <<	 <<		

