














 
 

 

 

 

 

 

 

 







Original	Sustituto
 Power	 Power
 Tv/AV	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 Eject	 Eject / Surround
 4	 4
 5	 5
 6	 6
 Play/Pause	 Play / Slow
 7	 7
 8	 8
 9	 9
 Stop	 Stop / Hold
 0	 0
 -/--	 Shift + Guide / EPG / -/--
 Return	 Back / Return

Original	Sustituto
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Up	 Up
 CH+	 CH+ / Page+
 Vol+	 Vol+
 Left	 Left
 OK	 OK
 Right	 Right
 Sys Menu	 D.Menu / Top
 CH-	 CH- / Page-
 Down	 Down
 Display	 Display / Media
 Picture	 Picture / Format
 Sound	 Sound / Title
 Timer	 Sleep / Timer
 Nicam/A2	 Audio / Lang I/II
 Lan/Prog-	 Shift + CH- / Page-





Original	Sustituto
Zoom/Prog+	Shift + CH+ /
Sub	Subtitle / EQ
Goto	Text / Goto
SET/Tv/TXT/DVB-	Setup / OPT /
Menu/Cancel/Tv Format	Menu / Home
ANG/Reveal/Exit	Exit / Cancel / Clear
Title/info	Shift + Sound / Title
<</Hold/Languag	<< / Tune-
>>/Size/Text	>> / Tune+
<</Subpage	<< / Preset-
FAV	Fav / Marker / PC
>> /Index	>> / Preset+
EPG	Guide / EPG / /--
Red/Pro	Red / Netflix / Search
Tv/Radio	TV/Radio /
Green/Slow/Audio	Green / APP / Repeat
Yellow/Rep/Freeze	Yellow / YouTube / Repeat

Original	Sustituto
Blue/A-B/Subtitle	Blue / Prime Video / Random

