



Original	Sustituto
Power	Power
Source	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	Guide / EPG / -/--
0	0
PRE-CH	Back / Return
TV	Display / Media
CH.MGR	Smart / List
Sleep	Sleep / Timer

Original	Sustituto
PC	Fav / Marker / PC
Vol+	Vol+
P+	CH+ / Page+
Mute	Mute / Dimmer
Vol-	Vol-
P-	CH- / Page-
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
[≡+]/PIP	Play / Slow
[≡?]/Info	Info / Angle
TTX/MIX	Text / Goto
Red / P.Mode	Red / Netflix / Search





Original	Sustituto	Original	Sustituto
Red / P.Mode	Picture / Format		
Green / S.Mode	Green / APP / Repeat		
Green / S.Mode	Sound / Title		
Yellow / Still	Yellow / YouTube / Repeat		
Yellow / Still	Pause / Step / Freeze		
Blue / P.Size	Blue / Prime Video / Random		
[≡♦] / PIP Source	Stop / Hold		
[≡◇] / PIP Swap	>> / Tune+		
Size	Zoom / Size		
PIP P+	>>I / Preset+		
I-II/Dual	Audio / Lang I/II		
(o)/SRS	Eject / Surround		
PIP Position	<< / Tune-		
PIP P-	I<< / Preset-		

