 

 
 
 

 

 
 
 

 

 

 

 
 
 
 
 

 
 
 

 
 
 
 
 





Original	Sustituto
 Power	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV Input	 AV
 >>	 >>
 <<	 <<
 I<<	 I<<
 >>I	 >>I

Original	Sustituto
 Play	 Play
 Stop	 Stop
 Pause	 Pause
 Info/Menu	 Info
 Home	 Smart
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Back	 Back
 Disc Menu	 D. Menu
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Repeat	 Text



