

 


 






 






 

 
















Original	Sustituto
 Power	 Power
 Tv/AV	 AV
 1	 1
 2	 2
 3	 3
 5	 5
 4	 4
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Mute	 Mute
 Q.View	 Options
 List	 List
 Menu	 Menu
 OK	 Ok

Original	Sustituto
 ARC	 Media
 PR+	 Ch +
 Up	 Up
 Down	 Down
 PR-	 Ch -
 Vol+	 Vol +
 Right	 Right
 Left	 Left
 Vol-	 Vol -
 Play	 Play
 Stop	 Stop
 >>/FF	 I<<
 <</REW	 <<
 Rec	 Rec
 Pause	 Pause
 Power	 Shift + Power
 SP/LP	 TV/R





Original	Sustituto
CH-	SHIFT + CH - Shift + Ch -
CH+	SHIFT + CH + Shift + Ch +
QSR START	E-MANUAL D.MENU D. Menu
QSR LENGTH	SOUND DUAL Dual
TEXT	REPEAT TEXT Text
TURBO PICTURE	AD SUBT Subt
TURBO SOUND	SHIFT + SOUND DUAL Shift + Dual
EYE/*	GUIDE Guide
I-II/*	A Red
PSM	B Green
SSM	C Yellow
SIZE	PICTURE FORMAT Format
HOLD	ECO 3D 3D
UPDATE	D Blue
INDEX	DISPLAY INFO Info
TIME	SHIFT + TIMER AV Shift + AV
MIX	SHIFT + SETTINGS OPT Shift + Options

Original	Sustituto
REVEAL	RETURN BACK Back
MODE	SHIFT + SEARCH TV/R Shift + TV/R

