 






















 





 




 





 





 

 







 

 

 









Original	Sustituto
 Power	 Power
 [=]/Text	 Text / Goto
 [=?]	 Eject / Surround
 [...]	 Subtitle / EQ
 [=+]	 Pause / Step / Freeze
 [=o]	 Shift + Subtitle / EQ
 [=♦]	 Zoom / Size
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Fav / Marker / PC

Original	Sustituto
 0	 0
 Source	 AV / Input / RDS
 ATV	 Shift + D.Menu / Top Menu
 DTV	 D.Menu / Top
 EPG	 Guide / EPG / -/-
 Radio	 TV/Radio /
 I/II/I-II	 Audio / Lang I/II
 Vol+	 Vol+
 PR+	 CH+ / Page+
 P.Info	 Info / Angle
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 PR-	 CH- / Page-
 [i+]	 Display / Media
 [⟷]	 Picture / Format
 Eco	 Sound / Title
 AV Mode	 Smart / List





Original	Sustituto	Original	Sustituto
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	End		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Sleep		Sleep / Timer
	Power Down		Shift + Power
	<</Rev		<< / Tune-
	Play		Play / Slow
	>>/Fwd		>> / Tune+

Original	Sustituto
	Option
	Rec
	Rec Stop
	Stop

