 



 







 



 



 



 

















 

 







 



 











 
 

 



 

 
 
 
 
 

 

 



 

 



 





Original		Sustituto		Original		Sustituto	
	Standby/On		Power		Repeat		Shift + Green / APP /
	Open/Close		Eject / Surround		>>		>>  / Preset+
	Tv Standby/On		Shift + Power		<<		<< / Tune-
	1		1		Stop		Stop / Hold
	2		2		PLay/Pause		Play / Slow
	3		3		>>		>> / Tune+
	4		4		Tv Vol+		Vol+
	5		5		Mute		Mute / Dimmer
	6		6		PR+		CH+ / Page+
	Tv/DVD		Display / Media		Tv Vol-		Vol-
	7		7		PR-		CH- / Page-
	8		8		Menu		Menu / Home
	9		9		Return		Back / Return
	Input Sel		AV / Input / RDS		Up		Up
	0		0		Left		Left
	I<<		I<< / Preset-		OK		OK
	Subtitle		Subtitle / EQ		Right		Right





Original	Sustituto
 Down	 Down
 Title List/Disc Menu	 D.Menu / Top
 Info	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Play List/Title Menu	 Smart / List
 Red/A	 Red / Netflix / Search
 Green/B	 Green / APP / Repeat
 Yellow/C	 Yellow / YouTube / Repeat
 Blue/D	 Blue / Prime Video / Random
 Copy	 Picture / Format
 Marker	 Fav / Marker / PC
 Rec Mode	 Shift + Rec / Rec Mode
 Timer	 Sleep / Timer
 Rec	 Rec / Rec Mode
 Pause/Rec Pause/Time Shift	 Pause / Step / Freeze

Original	Sustituto

