 






 

 


 

 

 

 


 

 

 

 

 
 
 





Original	Sustituto
 Source	 Shift + AV / Input / RDS
 Power	 Power
 List	 Smart / List
 TV	 Shift + 1
 DVD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS
 0/--	 Shift + Guide / EPG / -/--
 FAV	 Fav / Marker / PC

Original	Sustituto
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Left/Zoom-	 Left
 OK	 OK
 Right/Zoom+	 Right
 Down	 Down
 Guide	 Guide / EPG / -/--
 Return	 Back / Return
 Info	 Info / Angle
 Vol+	 Vol+
 Presets	 Setup / OPT /
 PR+	 CH+ / Page+
 Vol-	 Vol-
 PR-	 CH- / Page-
 Mute	 Mute / Dimmer
 Red/O Lang	 Red / Netflix / Search





 
 



 


 

 









 

 
 





 

 

 

 



 

 



 



 

 

 

 

 

 
 
 



Original	Sustituto	Original	Sustituto
 Red/O) Lang	 Audio / Lang I/II		
 Green/Subtitles	 Subtitle / EQ		
 Green/Subtitles	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Violet/Text	 Text / Goto		
 Stop Text	 Shift + Stop /		
 ??? Text	 Sleep / Timer		
 Zoom Text	 Zoom / Size		
 Media/Digital	 Display / Media		
 <<	 << / Tune-		
 Play	 Play / Slow		
 >>	 >> / Tune+		
 T-Link	 D.Menu / Top		
 Rec	 Rec / Rec Mode		
 Stop	 Stop / Hold		
 Pause	 Pause / Step / Freeze		



 



 

 

 

 

 

 

 

 


 

 

 

 







Original	Sustituto
	 Power
	 Smart / List
	 Shift + 1
	 Shift + 2
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 AV / Input / RDS
	 Shift + Guide / EPG / -/-
	 Exit / Cancel / Clear
	 Menu / Home

Original	Sustituto
	 Up
	 Left
	 OK
	 Right
	 Down
	 Guide / EPG / -/-
	 Back / Return
	 Info / Angle
	 Vol+
	 Setup / OPT /
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 Mute / Dimmer
	 Audio / Lang I/II
	 Red / Netflix / Search
	 Subtitle / EQ





Original	Sustituto
 Source / Eject	 Eject / Surround
 Power	 Power
 List	 Smart / List
 TV	 Shift + 1
 DVD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS
 0 / --	 Shift + Guide / EPG / -/-
 FAV	 Fav / Marker / PC

Original	Sustituto
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Guide	 Guide / EPG / -/-
 Return	 Back / Return
 Info	 Info / Angle
 Vol +	 Vol+
 PR +	 CH+ / Page+
 Vol -	 Vol-
 PR -	 CH- / Page-
 Mute	 Mute / Dimmer
 Red / A-B	 Shift + Yellow / YouTube /
 Red / A-B	 Red / Netflix / Search



