





 

 

 

 

 









 

 





 





Original	Sustituto
	 Power
	 Rec / Rec Mode
	 Red / Netflix / Search
	 I<< / Preset-
	 Green / APP / Repeat
	 Stop / Hold
	 Yellow / YouTube / Repeat
	 Play / Slow
	 Blue / Prime Video / Random
	 >>I / Preset+
	 AV / Input / RDS
	 Audio / Lang I/II
	 Picture / Format
	 Zoom / Size
	 Menu / Home
	 Text / Goto
	 Pause / Step / Freeze

Original	Sustituto
	 Left
	 Up
	 Right
	 OK
	 Down
	 Vol+
	 Mute / Dimmer
	 CH+ / Page+
	 Vol-
	 Sound / Title
	 CH- / Page-
	 Smart / List
	 1
	 2
	 3
	 4
	 5







 

 











 



 



 



 






 















Original	Sustituto	Original	Sustituto
0	 Eject / Surround	 [≡]	 Text / Goto
-0-	 Subtitle / EQ	 Left	 Left
Power	 Power	 Up	 Up
Rec	 Rec / Rec Mode	 Right	 Right
I<<	 I<< / Preset-	 OK	 OK
Red	 Red / Netflix / Search	 Down	 Down
Green/[[]]	 Green / APP / Repeat	 Vol+	 Vol+
Stop	 Stop / Hold	 Mute	 Mute / Dimmer
Play	 Play / Slow	 P+	 CH+ / Page+
Yellow / List	 Yellow / YouTube / Repeat	 Vol-	 Vol-
>>I	 >>I / Preset+	 Smart J	 Sound / Title
AV/[?]	 AV / Input / RDS	 P-	 CH- / Page-
I-II/[≡≡]	 Audio / Lang I/II	 Smart []	 Smart / List
[<>]/[+]	 Zoom / Size	 1	 1
PIP [■]	 Picture / Format	 2	 2
Menu	 Menu / Home	 3	 3
Pause	 Pause / Step / Freeze	 4	 4





Original	Sustituto	Original	Sustituto
	Power		Power
	-0-		Subtitle / EQ
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	AV/[?]		AV / Input / RDS
	I-II/[≡ ≡]		Audio / Lang I/II
	Zoom / Size		
	Pause		Pause / Step / Freeze
	[≡]		Text / Goto
	Left		Left
	Up		Up
	Right		Right
	OK		OK
	Down		Down
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	Smart J		Sound / Title
	P-		CH- / Page-
	Smart []		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P<P		Fav / Marker / PC

