

 












 

 

 

 

 

 







 

 





 





Original	Sustituto
	 Power
	 Rec / Rec Mode
	 Red / Netflix / Search
	 I<< / Preset-
	 Green / APP / Repeat
	 Stop / Hold
	 Yellow / YouTube / Repeat
	 Play / Slow
	 Blue / Prime Video / Random
	 >>I / Preset+
	 AV / Input / RDS
	 Audio / Lang I/II
	 Picture / Format
	 Zoom / Size
	 Menu / Home
	 Text / Goto
	 Pause / Step / Freeze

Original	Sustituto
	 Left
	 Up
	 Right
	 OK
	 Down
	 Vol+
	 Mute / Dimmer
	 CH+ / Page+
	 Vol-
	 Sound / Title
	 CH- / Page-
	 Smart / List
	 1
	 2
	 3
	 4
	 5








Original		Sustituto	
[6]	6	[TUNER 6]	6
[7]	7	[AUX - HDD 7]	7
[8]	8	[USB 8]	8
[9]	9	[BLUETOOTH 9]	9
[i+]	[i+]	[ANGLE INFO]	Info / Angle
[0]	0	[HDMI - BAT 0]	0
[P/P]	P<P	[PC FAV MARKER]	Fav / Marker / PC

Original		Sustituto	





Original	Sustituto
0	 Eject / Surround
-0-	 Subtitle / EQ
Power	 Power
Rec	 Rec / Rec Mode
I<<	 I<< / Preset-
Red	 Red / Netflix / Search
Green/[[]]	 Green / APP / Repeat
Stop	 Stop / Hold
Play	 Play / Slow
Yellow / List	 Yellow / YouTube / Repeat
>>I	 >>I / Preset+
AV/[?]	 AV / Input / RDS
I-II/[≡≡]	 Audio / Lang I/II
[<>]/[+]	 Zoom / Size
PIP [■]	 Picture / Format
Menu	 Menu / Home
Pause	 Pause / Step / Freeze

Original	Sustituto
 [≡]	 Text / Goto
 Left	 Left
 Up	 Up
 Right	 Right
 OK	 OK
 Down	 Down
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 Vol-	 Vol-
 Smart J	 Sound / Title
 P-	 CH- / Page-
 Smart []	 Smart / List
1	 1
2	 2
3	 3
4	 4











 

 

 

 

 

 







 



 





 


 



 

 







 

 




 
 


Original	Sustituto
	
	
	
	
	
	
	
	

Original	Sustituto





Original	Sustituto	Original	Sustituto
	Power		Power
	-0-		Subtitle / EQ
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	AV/[?]		AV / Input / RDS
	I-II/[≡ ≡]		Audio / Lang I/II
	[<>]/[+]		Zoom / Size
	Pause		Pause / Step / Freeze
	[≡]		Text / Goto
	Left		Left
	Up		Up
	Right		Right
	OK		OK
	Down		Down
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	Smart J		Sound / Title
	P-		CH- / Page-
	Smart []		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P<P		Fav / Marker / PC

