

 



 

 



 
 


 








 
 

 

 


Original	Sustituto		
	Power		Power
	3D		3D
	Tv Input		TV/R
	AV Input		AV
	Menu		Menu
	[≡]/Text		Text
	[≡♦]/STTL		Subt
	[+]/Aspect		D. Menu
	X/Exit		Exit
	i		Info
	APPS		Format
	Home		Smart
	Guide		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left

Original	Sustituto		
	OK		Ok
	Option		Options
	Return/Back		Back
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5





	Original	Sustituto	Original	Sustituto
	6			
	7			
	8			
	9			
	0			
	?/Help			
	Last View			
	<<			
	Play			
	>>			
	I<<			
	Pause			
	>>I			
	Stop			
	Rec	