



Original	Sustituto
	AV / Input / RDS
	Power
	Shift + OK
	Zoom / Size
	Shift + Smart / List
<</<I button icon"/>	<< / Tune-
	Play / Slow
>>/I> button icon"/>	>> / Tune+
	Shift + D.Menu / Top Menu
	I<< / Preset-
	Stop / Hold
>>I button icon"/>	>>I / Preset+
	Shift + Setup / OPT / Tools
	Picture / Format
	Shift + Menu /
	D.Menu / Top
	Shift + Display / Media

Original	Sustituto
	Exit / Cancel / Clear
	Display / Media
	Smart / List
	Fav / Marker / PC
	Guide / EPG / -/-
	Right
	Info / Angle
	Up
	OK
	Left
	Back / Return
	Down
	Setup / OPT /
	Menu / Home
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat





 












Original	Sustituto
	Blue / Prime Video / Random
	1
	2
	3
	4
	5
	6
	7
	8
	9
	[≡]/Text
	0
	[...]
	Vol+
	CH+ / Page+
	Mute / Dimmer
	Audio / Lang I/II

Original	Sustituto
	Vol-
	CH- / Page-





Original	Sustituto
 Power	 Power
 <</<	 << / Tune-
 Play	 Play / Slow
 >>/ >	 >> / Tune+
 Stop	 Stop / Hold
 >>	 >> / Preset+
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Right	 Right
 [i+]/Info	 Info / Angle
 Up	 Up
 Left	 Left
 Return	 Back / Return
 Down	 Down
 Home	 Shift + Menu /
 1	 1

Original	Sustituto
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [...]	 Subtitle / EQ
 Prog+	 CH+ / Page+
 Audio	 Audio / Lang I/II
 Prog-	 CH- / Page-








 
Original	Sustituto
	Power
	<< / Tune-
	Play / Slow
	>> / Tune+
	I<< / Preset-
	Stop / Hold
	>>I / Preset+
	Top Menu / D.Menu / Top
	Menu / Home
	Right
	[i+]/Info / Info / Angle
	Up
	OK
	Left
	Return / Back / Return
	Down
	Options / Setup / OPT /

Original	Sustituto
	Home / Shift + Menu /
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	1
	2
	3
	4
	5
	6
	7
	8
	9
	[≡]/Text / Text / Goto
	0
	[...] / Subtitle / EQ





Original	Sustituto
	 AV / Input / RDS
	 Power
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 I<< / Preset-
	 Stop / Hold
	 >>I / Preset+
	 D.Menu / Top
	 Menu / Home
	 Right
	 Info / Angle
	 Up
	 OK
	 Left
	 Back / Return
	 Down

Original	Sustituto
	 Shift + Menu /
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Text / Goto
	 0
	 Subtitle / EQ
	 Vol+
	 Mute / Dimmer
	 Audio / Lang I/II
	 Vol-

