







 

 
 
 
 
 

 

 






 




 
 





 
 
 
 

 
 











 




 
 


 
 




Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Info	 Info
 AV	 AV
 Red	 Red
 Green	 Green
 Yellow	 Yellow

Original	Sustituto
 Blue	 Blue
 TV/DTV	 TV/R
 Menu	 Menu
 Top Menu/[≡]	 Shift + Menu
 Back	 Back
 PR+	 Ch +
 PR-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 <</F.T/L	 <<
 Play/?/TV/Radio	 Play
 >>/[-]/Guide	 >>





Original		Sustituto		Original		Sustituto	
	Rec/>		Rec				
	Stop/[X]/I-II		Stop				
	Pause/[i+]/[...]		Pause				
	^/[--]		Subt				
	v/[]		Format				
	Zoom		Eject				
	Maxx Audio		Options				
	[*]/Music		Dual				
	[:::]		3D				

