



 







 

 



 









 



 





Original	Sustituto
 Power	 Power
 Power Tv	 Shift + Power
 Bonusview	 Smart / List
 Open/Close	 Eject / Surround
 Source Tv	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Subtitle	 Subtitle / EQ
 0	 0
 Audio	 Audio / Lang I/II

Original	Sustituto
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Disc Menu	 D.Menu / Top
 Menu	 Menu / Home
 Popup/Title Menu	 Shift + D.Menu / Top Menu
 Tools	 Setup / OPT /
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return





Original	Sustituto
	Down
	Exit / Cancel / Clear
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Internet@ / Display / Media
	Full Screen / Zoom / Size
	Repeat / Shift + Green / APP /
	Vol+ Tv / Vol+
	Mute TV / Mute / Dimmer
	CH+ Tv / CH+ / Page+
	Vol- Tv / Vol-
	CH- Tv / CH- / Page-

Original	Sustituto

