


 

 

 

 



 

 

 
 


 


 

 





 








 
 
 
 





 

 






Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 6	 6
 5	 5
 7	 7
 8	 8
 9	 9
 0	 0
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Repeat	 Text
 Shuffle	 Media
 Play	 Play

Original	Sustituto
 Pause	 Pause
 Stop	 Stop
 >>	 >>
 <<	 <<
 >>	 >>
 <<	 <<
 Option	 Options
 Display	 Info
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Folder Up	 Ch +
 Folder Down	 Ch -
 Clear	 Exit
 Sleep	 Sleep





Original	Sustituto
DIMMER	Dimmer
TP	TP
MONO	Mono
PRESET	Preset Up
PRESET	Preset Down
MEMORY	Memory
TUNING	Tuning Up
TUNING	Tuning Down
CD	CD
USB	USB
AUX	AUX
TUNER	Tuner
iPod	iPod
Folder Up iPod	Folder Up iPod
Folder Down iPod	Folder Down iPod
REPEAT	Repeat iPod
SHUFFLE	Shuffle iPod
SEARCH TV/R	TV/R
FAV PRE-CH	Pre Ch
SOUND DUAL	Dual
SHIFT + [Up Arrow]	Shift + Up
SHIFT + [Down Arrow]	Shift + Down
REC MODE	Rec
B	Green
A	Red
SHIFT + 1	Shift + 1
SHIFT + 2	Shift + 2
SHIFT + 3	Shift + 3
SHIFT + 4	Shift + 4
SHIFT + 5	Shift + 5
SHIFT + [+ CH]	Shift + Ch +
SHIFT + [- CH]	Shift + Ch -
HOME SMART	Smart
SHIFT + [APP MEDIA]	Shift + Media

Original	Sustituto
ENTER	Enter iPod
>>I	>>I iPod
I<<	I<< iPod
MENU	Menu iPod
Play/Pause	Play/Pause iPod
Open/Close	Open/Close
CLOCK	Clock
TIMER	Timer
SHIFT + OK	Shift + Ok
SHIFT + [Right Arrow]	Shift + Right
SHIFT + [Left Arrow]	Shift + Left
TOP MENU MENU	Menu
SHIFT + [Play Mode]	Shift + Play
ZOOM	Eject
E-MANUAL D.MENU	D. Menu
TIMER AV	AV

