


 



 
 
 



 

 

 






 
 





 







Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Text	 Text
 Back	 Back
 Menu	 Menu
 Digital	 Smart
 Analog	 Media
 Theatre	 Pre Ch

Original	Sustituto
 Return	 Shift + Back
 Tools	 Options
 Source	 AV
 [i+]	 Info
 [I]	 Guide
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 [+]	 3D
 [> <]	 Format
 A/B	 TV/R
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok





Original		Sustituto		Original		Sustituto	
	Mute		Mute				
	Vol+		Vol +				
	Vol-		Vol -				
	Prog+		Ch +				
	Prog-		Ch -				

