

 


 

 





 



 















| Original   | Sustituto   |
|--|---|
|  Power      |  Power   |
|  Open/Close |  Eject / Surround  |
|  Power Tv   |  +  Shift + Power |
|  AV Tv      |  AV / Input / RDS  |
|  1          |  1   |
|  2          |  2   |
|  3          |  3   |
|  PR+ Tv     |  CH+ / Page+   |
|  4          |  4   |
|  5          |  5   |
|  6         |  6  |
|  PR- Tv   |  CH- / Page-   |
|  7        |  7   |
|  8        |  8   |
|  9        |  9   |
|  Vol+ Tv  |  Vol+  |
|  0        |  0   |

 

 





 





 













 

 



| Original  | Sustituto   |
|---|---|
|  Mute Tv     |  Mute / Dimmer         |
|  Vol- Tv     |  Vol-                  |
|  <<          |  << / Tune-            |
|  >>          |  >> / Tune+            |
|  I<<         |  I<< / Preset-         |
|  >>I         |  >>I / Preset+         |
|  Pause/Step  |  Pause / Step / Freeze |
|  Play        |  Play / Slow           |
|  Stop        |  Stop / Hold           |
|  Display     |  Display / Media       |
|  Up         |  Up                   |
|  Setup     |  Setup / OPT /       |
|  Left      |  Left                |
|  Enter     |  OK                  |
|  Right     |  Right               |
|  Disc Menu |  D.Menu / Top        |
|  Down      |  Down                |





 


 
 
 


 
 
 
 

 









| Original   | Sustituto   |
|--|---|
|  Power        |  Power                   |
|  Eject        |  Eject / Surround        |
|  AV           |  AV / Input / RDS        |
|  1            |  1                       |
|  2            |  2                       |
|  3            |  3                       |
|  4            |  4                       |
|  5            |  5                       |
|  6            |  6                       |
|  7            |  7                       |
|  8           |  8                      |
|  9          |  9                     |
|  Tv/VCR     |  TV/Radio /            |
|  0          |  0                     |
|  <<         |  << / Tune-            |
|  >>         |  >> / Tune+            |
|  Pause/Step |  Pause / Step / Freeze |

| Original   | Sustituto  |
|--|--|
|  Play         |  Play / Slow              |
|  Stop         |  Stop / Hold              |
|  CLK/CNT      |  Display / Media          |
|  Up           |  Up                       |
|  PR/TRK+      |  CH+ / Page+              |
|  i            |  Info / Angle             |
|  Left         |  Left                     |
|  Enter        |  OK                       |
|  Right        |  Right                    |
|  PR/TRK-      |  CH- / Page-              |
|  Down        |  Down                    |
|  O)))/Audio |  Audio / Lang I/II      |
|  Rec/ITR    |  Rec / Rec Mode         |
|  Lock       |  Back / Return          |
|  Search     |  Red / Netflix / Search |
|  Clear      |  Exit / Cancel / Clear  |
|  Repeat     |  Green / APP / Repeat   |



