 




 
 
 
 
 
 

 

 

 

 

 
 
 
 


 








Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right

Original	Sustituto
 Left	 Left
 OK	 Ok
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Red	 Red
 Yellow	 Yellow
 Blue	 Blue
 Green	 Green
 EPG	 Guide
 Subtitle	 Subt
 TTX	 Text
 Audio	 Dual
 i	 Info
 FAV	 Pre Ch
 Tv/Radio	 TV/R





Original	Sustituto
VIDEO Video	HOME SMART Smart
SCAN Scan	APP MEDIA Media
DEVICE Device	SETTINGS OPT Options
FILE File	DISC NAV LIST List
ZOOM Zoom	ZOOM Eject
ROLL Roll	TIMER AV AV
RECORD Record	REC MODE Rec
PREV Prev.	⏪ I<<
NEXT Next	⏩ >>I
▶/ Play	▶ Play
▶/ Pause	Pause
⏪ <<	⏪ <<
⏩ >>	⏩ >>

Original	Sustituto

