
 
 






 
 

 

 

 
 



 
 
 
 
 




Original	Sustituto
	
Power	Power
	
Mute	Mute
	
Up	Up
	
Down	Down
	
Right/[≡o]	Right
	
Left/[≡+]	Left
	
Menu	Menu
	
P+	Ch +
	
P-	Ch -
	
Vol+	Vol +
	
Vol-	Vol -
	
Recall/[≡?]	Pre Ch
	
Sleep/[≡◆]	Sleep
	
1	1
	
2	2
	
3	3
	
4	4

Original	Sustituto
	
5	5
	
6	6
	
7	7
	
8	8
	
9	9
	
0	0
	
Input/[/≡]	AV
	
Normal/OK/[≡i]	Ok
	
[≡]	Text
	
[≡x]	Format
	
Red/Skip	Red
	
Green/Move	Green
	
Yellow/Delete	Yellow
	
Blue/Mode	Blue

