




 
 




 
 

 
 
 

 

 

 









Original	Sustituto
SOURCE	RDS AV INPUT AV / Input / RDS
	Power
	TV 1 1
	DVD 2 2
	CD - STB 3 3
	VIDEO 4 4
	TAPE 5 5
	TUNER 6 6
	AUX - HDD 7 7
	USB 8 8
	BLUETOOTH 9 9
	GUIDE EPG Guide / EPG / -/--
	HDMI - SAT 0 0
	RETURN BACK Back / Return
	SHIFT + HDMI - SAT 0 Shift + 0
	OPT-TOOLS SETUP Setup / OPT /
	SHIFT + VIDEO 4 Shift + 4

Original	Sustituto
	SHIFT + PC FAV MARKER Shift + Fav / Marker / PC
	CH PAGE CH+ / Page+
	DIMMER MUTE Mute / Dimmer
	VOL + Vol+
	VOL - Vol-
	SIZE ZOOM Zoom / Size
	CH PAGE - CH- / Page-
	LANG I/II AUDIO Audio / Lang I/II
	TITLE SOUND Sound / Title
	FORMAT PICTURE Picture / Format
	TIMER SLEEP Sleep / Timer
	Up
	Left
	OK
	Right
	HOME MENU Menu / Home
	CLEAR EXIT CANCEL Exit / Cancel / Clear





Original	Sustituto
	 Down
	 Info / Angle
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Text / Goto
	 Shift + Text /
	 Shift + Zoom /
	 >> / Tune+
	 Play / Slow
	 Subtitle / EQ
	 Stop / Hold
	 << / Tune-
	 Fav / Marker / PC
	 Smart / List
	 Shift + Audio / Lang I/II

Original	Sustituto
	 Pause / Step / Freeze

