




Original	Sustituto
 Power	 Power
 Menu	 Menu
 Guide	 Guide
 Input Tv	 TV/R
 Input AV	 AV
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Exit	 Exit
 i	 Info
 Option	 Options
 Return/Back	 Back
 Netflix	 Media
 Home	 Smart
 APPS	 Shift + Media
 [+]/Aspect	 3D

Original	Sustituto
 [≡/◆]/STTL	 Subt
 [≡]/Text	 Text
 Mute	 Mute
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 ?/Help	 Dual
 Recall	 Pre Ch
 1	 1
 2	 2
 3	 3





	Original	Sustituto	Original	Sustituto
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	Play			
	Pause			
	Stop			
	Rec			
	>>			
	<<			
	>>			
	<<			

