



Original	Sustituto
 Standby	 Power
 Auto	 Smart / List
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 Aspect	 Shift + Picture / Format

Original	Sustituto
 Audio	 Audio / Lang I/II
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Input	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 FAV	 Fav / Marker / PC





Original	Sustituto
FAV-	SHIFT + CH PAGE / -
FAV+	SHIFT + CH PAGE / +
EPG	GUIDE EPG
TEXT	GOTO TEXT
HOLD	SHIFT + HOLD
TV/RADIO	PROGRAM TV/RADIO
SUBTITLE	EQ SUBTITLE
INDEX	ANGLE INFO
SIZE	SIZE ZOOM
REVEAL	OPT-TOOLS SETUP
SUBPAGE	SURROUND
MEDIA	SHIFT + MEDIA DISPLAY
Play	SLOW
Pause	STEP-FREEZE
<<	TUNE-
>>	TUNE+
Rec	REC MODE

Original	Sustituto
Stop	HOLD
I<<	PRESET-
>>I	PRESET+
Red	NETFLIX SEARCH
Green	APP REPEAT
Yellow	YouTube REPEAT A-B
Blue	Prime Video RANDOM

