



Original	Sustituto
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV	 TV/Radio /
 0	 0
 Recall	 Fav / Marker / PC
 V+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+

Original	Sustituto
 V-	 Vol-
 World/Internet	 Smart / List
 P-	 CH- / Page-
 Menu	 Menu / Home
 Q.Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 i	 Info / Angle
 Music/Camera	 Display / Media
 TV Guide	 Guide / EPG / -/-
 */O	 Shift + 1
 */Q	 Shift + 2





Original	Sustituto
[≡]/Text	GOTO TEXT Text / Goto
Red	NETFLIX SEARCH Red / Netflix / Search
Green	APP REPEAT Green / APP / Repeat
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat
Blue	Prime Video RANDOM Blue / Prime Video / Random
LANG.	LANG I/II AUDIO Audio / Lang I/II
[≡]..	TITLE SOUND Sound / Title
[-O-]	OPT-TOOLS SETUP Setup / OPT /
<<	TUNE- TUNE- << / Tune-
Pause	STEP-FREEZE STEP-FREEZE Pause / Step / Freeze
>>	TUNE+ TUNE+ >> / Tune+
Rec	REC MODE REC MODE Rec / Rec Mode
Play	SLOW SLOW Play / Slow
Stop	HOLD HOLD Stop / Hold

Original	Sustituto

