



Original	Sustituto
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	TV
	0
	Recall
	V+
	Mute
	P+
	AV / Input / RDS
	1
	2
	3
	4
	5
	6
	7
	8
	9
	TV/Radio /
	0
	Fav / Marker / PC
	Vol+
	Mute / Dimmer
	CH+ / Page+

Original	Sustituto
	V-
	World/Internet
	P-
	Menu
	Q.Menu
	Up
	Left
	OK
	Right
	Down
	Back
	Exit
	i
	Music/Camera
	TV Guide
	*/O
	*/Q
	Vol-
	Smart / List
	CH- / Page-
	Menu / Home
	D.Menu / Top
	Up
	Left
	OK
	Right
	Down
	Back / Return
	Exit / Cancel / Clear
	Info / Angle
	Display / Media
	Guide / EPG / -/-
	Shift + 1
	Shift + 2



