




 
 
 



 
 




 
 
 

 
 
 


 







 
 
 






 

 
 
 
 
 
 


 




 


Original	Sustituto	Original	Sustituto
 Power	 Power	 Play	 Play
 Info	 Info	 Pause	 Pause
 Zoom	 Eject	 Stop	 Stop
 DVD/USB/SD/DV	 AV	 I<</FAV-PR	 I<<
 Title	 Media	 >>I	 >>I
 Menu	 Menu	 <</Guide	 <<
 Setup	 Options	 >>/EPG	 >>
 CH+	 Ch +	 1	 1
 CH-	 Ch -	 2	 2
 Up	 Up	 3	 3
 Down	 Down	 4	 4
 Right	 Right	 5	 5
 Left	 Left	 6	 6
 Enter	 Ok	 7	 7
 Return	 Back	 8	 8
 A-B/Language	 Dual	 9	 9
 Rep/PR List	 List	 0	 0





Original		Sustituto	
+10	+10	GUIDE	Guide
GOTO SEARCH	Goto/Search	FAV PRE-CH	Pre Ch
SUBT	Subt	AD SUBT	Subt
ANGLE TELETEXT	Angle/Teletext	REPEAT TEXT	Text
AUDIO	Audio	SHIFT + SOUND DUAL	Shift + Dual
SLOW TV/RADIO	Slow/Tv/Radio	SEARCH TV/R	TV/R

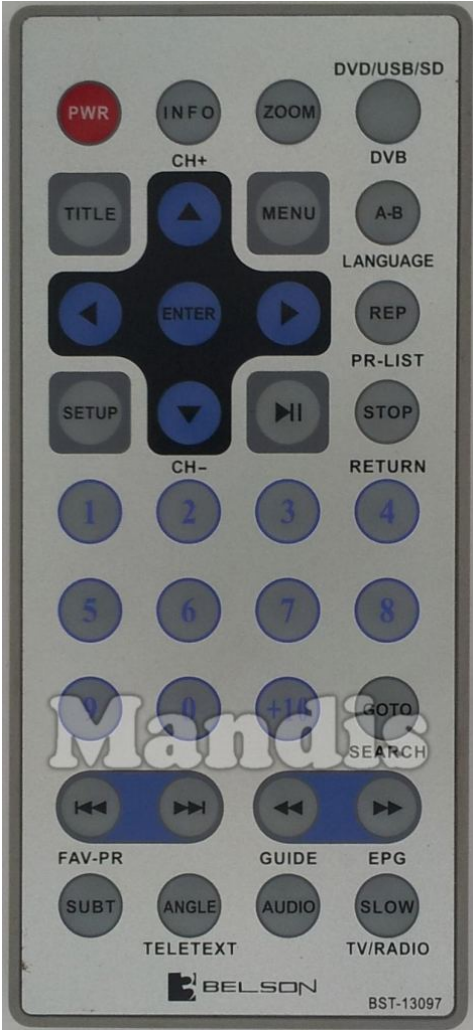Original	Sustituto

