





| Original | Sustituto |
|--|---|
|  Mute |  Mute / Dimmer |
|  Power |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  APP |  Shift + Green / APP / |
|  APP |  Display / Media |
|  0 |  0 |
|  Back |  Back / Return |
|  L- |  I<< / Preset- |
|  L+ |  >>I / Preset+ |

| Original | Sustituto |
|--|---|
|  Menu |  Menu / Home |
|  Up |  Up |
|  Exit |  Exit / Cancel / Clear |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  CH+ |  CH+ / Page+ |
|  Down |  Down |
|  Vol+ |  Vol+ |
|  CH- |  CH- / Page- |
|  Vol- |  Vol- |
|  Info |  Info / Angle |
|  List |  Smart / List |
|  EPG |  Guide / EPG / -/- |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |





| Original | Sustituto | Original | Sustituto |
|----------|-----------|----------|-----------------------------|
| | Blue | | Blue / Prime Video / Random |
| | Audio | | Audio / Lang I/II |
| | Subt | | Subtitle / EQ |
| | Text | | Text / Goto |
| | Tv/Rad. | | TV/Radio / |
| | OPT | | Setup / OPT / |
| | Still | | Pause / Step / Freeze |
| | Tv/AV | | AV / Input / RDS |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

| Original | Sustituto |
|----------|-----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

