















Original	Sustituto
	Mute
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	APP
	APP
	0
	Back
	L-
	L+

Original	Sustituto
	Mute / Dimmer
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Shift + Green / APP /
	Display / Media
	0
	Back / Return
	I<< / Preset-
	>>I / Preset+

Original	Sustituto
	Menu
	Up
	Exit
	Left
	OK
	Right
	CH+ / Page+
	Down
	Vol+
	CH- / Page-
	Vol-
	Info
	List
	EPG
	Red
	Green
	Yellow

Original	Sustituto
	Menu / Home
	Up
	Exit / Cancel / Clear
	Left
	OK
	Right
	CH+ / Page+
	Down
	Vol+
	CH- / Page-
	Vol-
	Info / Angle
	Smart / List
	Guide / EPG / -/-
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat





Original	Sustituto	Original	Sustituto
	Blue Blue / Prime Video / Random		
	Audio Audio / Lang I/II		
	Subt Subtitle / EQ		
	Text Text / Goto		
	Tv/Rad. TV/Radio /		
	OPT Setup / OPT /		
	Still Pause / Step / Freeze		
	Tv/AV AV / Input / RDS		

Original	Sustituto	Original	Sustituto

