





 
 



 

 















 
 

 
 




Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ASPECT	 Format
 P.C.	 Pre Ch
 MENU	 Menu
 SOURCE	 Shift + AV
 Up	 Up

Original	Sustituto
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Exit	 Exit
 Display	 Info
 Vol +	 Vol +
 Vol -	 Vol -
 CH +	 Ch +
 CH -	 Ch -
 Sound	 Dual
 PIC	 Shift + Format
 NICAM	 Media
 SLEEP	 Sleep
 TV	 Smart
 AV	 AV
 HDMI	 Shift + Media





Original	Sustituto	Original	Sustituto
SCART1	SCART1	AD SUBT	Subt
Y.Pb.Pr	Y.PB.PR	SHIFT + AD SUBT	Shift + Subt
RECALL	RECALL	RETURN BACK	Back
Red	Red	A	Red
Green	Green	B	Green
Yellow	Yellow	C	Yellow
Blue	Blue	D	Blue
REVEAL	Reveal	PLAY MODE	Play
HOLD	Hold	II	Pause
LIST	List	DISC NAV LIST	List
INDEX	Index	■	Stop
SUBPAGE	Subpage	REC MODE	Rec
SIZE	Size	ECO 3D	3D
AUTO	Auto	-/- GUIDE	Guide
TEXT	Text	REPEAT TEXT	Text

Original	Sustituto

