




 

 
 


 
 



 

 




 

 


 
 

 







 

 
Original	Sustituto
 Power	 Power
 TV	 Smart
 VCR/AUX	 Media
 Sleep	 Sleep
 Tv/AV	 AV
 Tuner/Band	 TV/R
 DVD/CD	 Pre Ch
 FL	 3D
 Play Mode-Mix	 Shift + Play
 Repeat	 Text
 Position	 Shift + Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Sustituto
 7	 7
 8	 8
 9	 9
 0	 0
 +10/-/±	 Guide
 Cancel	 Exit
 I<< Skip	 I<<
 Skip >>I	 >>I
 << Slow/Search	 <<
 Slow/Search >>	 >>
 Stop	 Stop
 Pause	 Pause
 Play	 Play
 Top Menu/Direct Navigator	 Shift + Menu
 Menu/Play List	 Menu
 Display	 Info
 Return	 Back



 


 

 

 
 
 



 

 



 

 
 
 

 

 




Original	Sustituto
	 Up
	 Down
	 Right
	 Left
	 Ok
	 Vol +
	 Vol -
	 Mute
	 Options
	 Subt
	 D. Menu
	 Red
	 Green
	 Yellow
	 List
	 Format
	 Eject

Original	Sustituto
	 Blue
	 Dual



 

 

 

 



 

 

 






 
 

 

 
 
 
 
 
 
 







	Original	Sustituto		Sustituto
	Power		Power	
	1		1	
	2		2	
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	0		0	
	+10/-/--		Guide	
	Tv/AV		AV	
	CH+		Ch +	
	CH-		Ch -	
	Tv Vol+		Vol +	
	Tv Vol-		Vol -	

Original	Sustituto





Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10/-11	 Guide
 >>	 >>
  <<	  <<
 <<	 <<
 >>	 >>
 Pause	 Pause

Original	Sustituto
 Play	 Play
 Stop	 Stop

