





 

 
 
 

 
 
 

 
 
 
 
 

 

 
 
 

 

 





 

 

 

 
 
 

 

 

 
 


 

 

 
 
 

 

 

 





Original		Sustituto		Original		Sustituto	
	Standby		Power		Vol-		Vol -
	Auto		Smart		CH+		Ch +
	Tv/Radio		TV/R		CH-		Ch -
	Mute		Mute		Nicam/A2		Options
	1		1		Aspect		3D
	2		2		Display		Info
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		OK		Ok
	8		8		Menu		Menu
	9		9		Exit		Exit
	0		0		Source		AV
	-/--		Shift + Guide		P.Mode		Shift + Format
	Back		Back		S.Mode		Shift + Dual
	Vol+		Vol +		Sleep		Sleep





Original	Sustituto		
	Fav		Pre Ch
	Fav-		Shift + Ch -
	Fav+		Shift + Ch +
	Hold		Shift + AV
	EPG		Guide
	Text		Text
	Lang		Dual
	Subtitle		Subt
	Index		List
	Reveal		Eject
	Subpage		D. Menu
	Media		Media
	Size		Format
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>

Original	Sustituto		
	Rec		Rec
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

