











 





 





 

 
 










Original	Sustituto
	 Power
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 M Menu / Home
	 Return Back / Return
	 Up
	 Left
	 OK
	 Right
	 Down
	 Source AV / Input / RDS
	 Presets D.Menu / Top
	 Info Info / Angle
	 EPG Guide / EPG / -/-
	 Vol+

Original	Sustituto
	 Mute / Dimmer
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Shift + Fav / Marker / PC
	 0
	 Fav / Marker / PC
	 Picture / Format





Original	Sustituto
 Lang	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Sleep	 Sleep / Timer
 (O)	 Display / Media
 O/World	 Smart / List
 [≡x]	 TV/Radio /
 [≡]	 Text / Goto

Original	Sustituto

