




 

 
 


 



 

 

 

 

 

 






 

 



 

 




 
 













Original	Sustituto
 Power	 Power
 Select Drive	 Pre Ch
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Del	 List
 Input Select	 AV
 CH+	 Ch +
 CH-	 Ch -
 Cast/Viera	 Smart

Original	Sustituto
 Prog/Check	 Sleep
 I<< Skip	 I<<
 Skip >>I	 >>I
 << Slow/Search	 <<
 Slow/Search >>	 >>
 Stop	 Stop
 Pause/Pause Live	 Pause
 Play/x1.3	 Play
 i/Status	 Info
 Exit	 Exit
 Pop-Up Menu/Direct	 D. Menu
 Guide	 Guide
 Function Menu	 Menu
 Up	 Up
 Down	 Down
 Right/II>	 Right
 <II/Left	 Left





Original	Sustituto
	OK
	Option
	Return
	Red
	Green
	Yellow
	Blue
	Rec
	Rec Mode
	Ext Link
	Direct Tv Rec
	[≡]/Text
	[≡◆]/STTL
	Audio
	Display
	Chapter
	Time Slip
	Ok
	Options
	Back
	Red
	Green
	Yellow
	Blue
	Rec
	Shift + Rec
	Media
	TV/R
	Text
	Subt
	Dual
	Shift + Info
	Format
	Shift + Sleep

Original	Sustituto
	Manual Skip -10s
	Manual Skip +60s
	Power Tv
	AV Tv
	Vol+ Tv
	Vol- Tv
	CH+ Tv
	CH- Tv
	Shift + Left
	Shift + Right
	Shift + Power
	Shift + AV
	Vol +
	Vol -
	Shift + Ch +
	Shift + Ch -

