

 

 



 

 


 



 


 



 
 
 



 
 
 









 









 



 
 

 
 
 
 

 
 



 



 





 
 
 



 
 
 

 

 

 
 
 
 
 

 
 
 
 
 
 
 
 




Original	Sustituto
 Power	 Power
 Open/Close	 Eject
 DVD	 Smart
 Display	 Info
 Disc Menu	 D. Menu
 Setup	 Options
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Title	 List
 Pause / Step	 Pause
 Stop	 Stop
 Play	 Play
 I<<	 I<<

Original	Sustituto
 >>I	 >>I
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Program	 Sleep
 Clear	 Exit
 O)) / Audio	 Dual
 [...] / Subtitle	 Subt
 Marker	 3D
 Search	 TV/R





Original	Sustituto
 Power	 Power
 Eject	 Eject
 Tv / VCR	 TV/R
 VCR	 Smart
 AV	 AV
 CLK / CNT	 Info
 [i]	 Media
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Pause / Step	 Pause
 Stop	 Stop
 Rec / ITR	 Rec
 Play	 Play
 I<<	 I<<

Original	Sustituto
 >>I	 >>I
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 O)) / Audio	 Dual
 Search	 Shift + TV/R
 C.Lock	 Back
 0Z Repeat	 Text
 CM Skip	 Yellow



