



Original	Sustituto
RATIO	Picture / Format
POWER	Power
INPUT	AV / Input / RDS
AV MODE	Info / Angle
ENERGY	Sleep / Timer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
LIST	Smart / List
0	0
Q.VIEW	Display / Media

Original	Sustituto
VOL+	Vol+
MUTE	Mute / Dimmer
PR+/PAGE UP	CH+ / Page+
VOL-	Vol-
PR-/PAGE	CH- / Page-
UP	Up
LEFT	Left
OK	OK
RIGHT	Right
MENU	Menu / Home
DOWN	Down
RETURN	Back / Return
RED	Red / Netflix / Search
GREEN	Green / APP / Repeat
STOP	Stop / Hold
YELLOW	Yellow / YouTube / Repeat
PLAY	Play / Slow





Original		Sustituto		Original		Sustituto	
	BLUE		Blue / Prime Video / Random				
	PAUSE		Pause / Step / Freeze				
	TEXT		Text / Goto				
	<<		<< / Tune-				
	T.OPT		Setup / OPT /				
	>>		>> / Tune+				
	FAV/MARK		Fav / Marker / PC				
	SIMPLINK		Zoom / Size				
	Q.MENU		D.Menu / Top				

