

 



 

 

 

 

 

 

 

 

 

 

 

 





















 

 

 


 
 

 
 
 









Original	Sustituto	Original	Sustituto
	Power		Power
	Source		AV / Input / RDS
	P.Mode		Setup / OPT /
	S.Mode		Sound / Title
	Home		Shift + Menu /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Q.View		D.Menu / Top
	0		0
	Sleep		Sleep / Timer
	Vol-		Vol-
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	I/II/Audio		Audio / Lang I/II
	P-		CH- / Page-
	Subtitle		Subtitle / EQ
	3D World		Display / Media
	Info		Info / Angle
	FAV		Fav / Marker / PC
	Screen		Picture / Format
	CH List		Smart / List
	Menu		Menu / Home
	Up		Up
	Guide		Guide / EPG / -/-
	Left		Left
	OK		OK



