



Original	Sustituto
	 Power
	 TV/R
	 Subt
	 Format
	 Guide
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Pre Ch
	 Back

Original	Sustituto
	 D. Menu
	 Media
	 Stop
	 Pause
	 Play
	 I<<
	 >>I
	 Rec
	 <<
	 >>
	 Ch +
	 Ch -
	 Up
	 Down
	 Right
	 Left
	 Ok





	Original	Sustituto	Original	Sustituto
	Timer	AV		
	Edit	REPEAT TEXT		
	Tv Vol+	+ VOL		
	Tv Vol-	VOL -		
	Mute	MUTE		
	[i+]	DISPLAY INFO		
	System	HOME SMART		
	Red	A		
	Green	B		
	Yellow	C		
	Blue	D		

