








 


 









 

 



 





 


 


 








 

 

 

 

 

 
 
 

 

 

 




	Original	Sustituto		Original	Sustituto
	 Power	 Power		 Exit	 Exit
	 Mute	 Mute		 Up	 Up
	 1	 1		 Down	 Down
	 2	 2		 Right	 Right
	 3	 3		 Left	 Left
	 4	 4		 Ok	 Ok
	 5	 5		 Vol+	 Vol +
	 6	 6		 Vol-	 Vol -
	 7	 7		 Sound	 Shift + Dual
	 8	 8		 Pic	 Shift + Format
	 9	 9		 Ch+	 Ch +
	 0	 0		 Ch-	 Ch -
	 Audio	 Dual		 Sleep	 Sleep
	 Recall	 Back		 Aspect	 Format
	 Tv Menu	 Menu		 Freeze	 Eject
	 Source	 AV		 Tv/Radio	 TV/R
	 ChList	 List		 Text	 Text





Original		Sustituto		Original		Sustituto	
	Epg		Guide		I<<		I<<
	Fav		Pre Ch		>>I		>>I
	Info		Info		Play		Play
	Red		Red		Pause		Pause
	Green		Green		Stop		Stop
	Yellow		Yellow		Rec/Rep		Rec
	Blue		Blue				
	Reveal		Media				
	Hold		D. Menu				
	Index		Shift + Info				
	Subpage		Shift + AV				
	List		Smart				
	Mix		Options				
	Subtitle		Subt				
	Size		3D				
	<<		<<				
	>>		>>				

