



| Original | Sustituto |
|----------|-----------------------------|
| Power | Power |
| Setup | Setup / OPT / |
| Disk | Yellow / YouTube / Repeat |
| Disk | + Shift + 7 |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| HDMI/AV | AV / Input / RDS |
| HDMI/AV | Blue / Prime Video / Random |
| HDMI/AV | + Shift + 0 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| Mute | Mute / Dimmer |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |

| Original | Sustituto |
|----------|----------------------------------|
| Edit | Fav / Marker / PC |
| Copy | Guide / EPG / -/- |
| Dir | Text / Goto |
| 0 | 0 |
| Movie | Smart / List |
| Music | Display / Media |
| Photo | + Shift + Display / Media |
| Vol- | Vol- |
| Vol+ | Vol+ |
| Up | Up |
| Left | Left |
| Enter | OK |
| Right | Right |
| Down | Down |
| Repeat | Green / APP / Repeat |
| Pause | Pause / Step / Freeze |
| Step | + Shift + Pause / Step / Freeze |





| Original | | Sustituto | | Original | Sustituto |
|----------|-----------|-----------|------------------------|----------|-----------|
| | <</Rev | | << / Tune- | | |
| | Play | | Play / Slow | | |
| | I<</PG Up | | I<< / Preset- | | |
| | I<</PG Up | | CH+ / Page+ | | |
| | >>/FF | | >> / Tune+ | | |
| | Stop | | Stop / Hold | | |
| | >>I/PG Dn | | >>I / Preset+ | | |
| | >>I/PG Dn | | CH- / Page- | | |
| | Audio | | Audio / Lang I/II | | |
| | Sub-T | | Subtitle / EQ | | |
| | PSM | | D.Menu / Top | | |
| | Info | | Info / Angle | | |
| | Home | | Menu / Home | | |
| | Exit | | Exit / Cancel / Clear | | |
| | S.Show | | Picture / Format | | |
| | DVD | | Red / Netflix / Search | | |
| | DVD | | Shift + 2 | | |

