



Original	Sustituto	Original	Sustituto
	TV/PC		Eject / Surround
	Power		Power
	Input		AV / Input / RDS
	TV/Radio		TV/Radio /
	Text		Text / Goto
	I-II		Audio / Lang I/II
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List

Original	Sustituto	Original	Sustituto
	0		0
	Q.View		Display / Media
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	Info		Info / Angle
	Down		Down
	Guide		Guide / EPG / -/-
	Vol+		Vol+
	Return		Back / Return
	PR+		CH+ / Page+
	Vol-		Vol-
	PR-		CH- / Page-
	FAV		Fav / Marker / PC





Original	Sustituto	Original	Sustituto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Stop		Stop / Hold
	Yellow		Yellow / YouTube / Repeat
	Play		Play / Slow
	Blue		Blue / Prime Video / Random
	Pause		Pause / Step / Freeze
	Q.Menu		D.Menu / Top
	<<		<< / Tune-
	T.OPT		Setup / OPT /
	>>		>> / Tune+
	Subtitle		Subtitle / EQ
	Mark		Picture / Format

Original	Sustituto	Original	Sustituto

