





 
 

 





 

 
 

 











 

 




	Original	Sustituto	Original	Sustituto
	On/Standby	 Power		
	Source Power	 Shift + Power		
	1	 1		
	2	 2		
	3	 3		
	4	 4		
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	0	 0		
	Vol+	 Vol +		
	Vol-	 Vol -		
	Mute	 Mute		
	Channel+	 Ch +		
	Channel-	 Ch -		










 


 



Original	Sustituto	Original	Sustituto
 On/Standby	 Power	 <</Channel-	 I<<
 Play	 Play	 >>/Tuning+	 >>
 Stop	 Stop	 <</Tuning-	 <<
 Still/Pause	 Pause	 DVS/Stereo	 Dual
 Mute	 Mute	 Display	 Info
 Vol+	 + Vol +	 Subwoofer Level+	 Ch +
 Vol-	 Vol -	 Subwoofer Level-	 Ch -
 Push/Enter	 Ok	 Source Power	 Shift + Power
 Up	 Up	 DVD/CD	 Red
 Down	 Down	 FM/AM	 Green
 Right	 Right	 AUX	 Yellow
 Left	 Left	 iPod	 Blue
 Menu/Guide	 Guide	 Home	 Smart
 Top Menu	 Menu	 Net/USB	 Media
 Return	 Back	 1	 1
 Tool	 Options	 2	 2
 >> /Channel+	 >>	 3	 3





	Original	Sustituto		Sustituto
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	0		0	
	+10		Pre Ch	
	Clear		Exit	
	HDMI		Shift + Media	
	Sleep		Sleep	
	Call		Shift + Pre Ch	
	Program		Shift + Sleep	
	Repeat		Text	
	Random		TV/R	
	Status		AV	
	Tone		List	

	Original	Sustituto		Sustituto
	Audio RDS		Shift + Dual	
	Subtilte/PTY		Subt	
	Angle/CT		3D	
	Zoom/RT		Eject	
	Surround		Format	
	Surround		D. Menu	
	Memo		Rec	







 











 
 

 




	Original	Sustituto		Original	Sustituto
	On/Standby				
	Source Power	+			
	Channel+				
	Channel-				
	Vol+				
	Vol-				
	Mute				
	1				
	2				
	3				
	4				
	5				
	6				
	7				
	8				
	9				
	0				





Original	Sustituto	Original	Sustituto
 On/Standby	 Power		
 Source Power	 +  Shift + Power		
 Play	 Play		
 Stop	 Stop		
 Still/Pause	 Pause		
 >>	 >>		
 <<	 <<		
 Channel+	 Ch +		
 Channel-	 Ch -		
 Vol+	 Vol +		
 Vol-	 Vol -		
 Mute	 Mute		

