






 



 

 
 


 




 









Original	Sustituto
 On/Standby	 Power
 AMP	 Shift + Power
 Dimmer	 Shift + Mute / Dimmer
 Internet Radio	 Shift + 1
 Music Server	 Shift + 2
 Online Music	 Shift + 3
 iPod/USB	 Shift + 7
 M-XPort	 Shift + 4
 Tuner	 Shift + 6
 USB Digital In	 Shift + 8
 OPT/Coax Digital	 Shift + 5
 Favorite	 Fav / Marker / PC
 I<</CH-	 I<< / Preset-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>/CH+	 >>I / Preset+
 <</Tuning-	 << / Tune-

Original	Sustituto
 Stop	 Stop / Hold
 >>/Tuning+	 >> / Tune+
 Input Up	 CH+ / Page+
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Input Down	 CH- / Page-
 M-Dax	 Smart / List
 Vol-	 Vol-
 Menu	 Menu / Home
 Mode	 Info / Angle
 Up	 Up
 Left	 Left
 Enter/Memo	 OK
 Right	 Right
 Search	 Red / Netflix / Search
 Down	 Down
 Home	 D.Menu / Top





Original	Sustituto
1	TV
2	DVD
3	CD - STB
4	VIDEO
5	TAPE
6	TUNER
7	AUX - HDD
8	USB
9	BLUETOOTH
+10	GUIDE EPG
0	HDMI - BAT
CLEAR	EXIT
DIG. OUT	OPT-TOOLS SETUP
RANDOM	Prime Video RANDOM
REPEAT	APP REPEAT
DISPLAY	MEDIA DISPLAY

Original	Sustituto

