



 

 
 
 

 

 
 


 



 
 
 

 


 
 


 




 
 



 


 


 
 
 
 
 

 


 

 



 
 




 
 






 

 

 


 

 
 

 

 





Original	Sustituto	Original	Sustituto
 Power On	 Power	 Memory	 Blue
 Power Off	 Shift + Power	 Search	 TV/R
 1/BD	 1	 Input Mode	 AV
 2/(SAT/CBL)	 2	 CH+	 Ch +
 3/(DOCK)	 3	 CH-	 Ch -
 Status	 4	 Sleep	 Sleep
 BD	 5	 Audio Delay	 Smart
 Tuner	 6	 Mute	 Mute
 DVD	 7	 Vol+	 Vol +
 DOCK	 8	 Vol-	 Vol -
 TV	 9	 Menu	 Menu
 Game	 Guide	 Return	 Back
 SAT/CBL	 0	 CH Level	 Dual
 V.AUX	 Pre Ch	 Surround	 3D
 Band	 Red	 Up	 Up
 Mode	 Green	 Down	 Down
 Shift	 Yellow	 Left	 Left





Original	Sustituto	Original	Sustituto
 Right	 Right	 Random Ipod	 Format
 Enter	 Ok	 I<< Ipod	 I<<
 Night	 Eject	 >>I Ipod	 >>I
 Restorer	 D. Menu		
 Tone	 Info		
 Test	 Options		
 Dimmer	 List		
 < Surround	 Shift + Left		
 > Surround	 Shift + Right		
 up Tuning	 Shift + Up		
 Down Tuning	 Shift + Down		
 Play Ipod	 Play		
 Pause Ipod	 Pause		
 Stop Ipod	 Stop		
 << Ipod	 <<		
 >> Ipod	 >>		
 Repeat Ipod	 Text		

