





Original	Sustituto
	 Power
	 Text / Goto
	 Shift + Info / Angle
	 Subtitle / EQ
	 Stop / Hold
	 Sleep / Timer
	 Zoom / Size
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Back / Return

Original	Sustituto
	 0
	 AV / Input / RDS
	 Shift + D.Menu / Top Menu
	 Guide / EPG / -/-
	 Shift + Setup / OPT / Tools
	 TV/Radio /
	 Shift + Down
	 Vol+
	 CH+ / Page+
	 Shift + AV / Input / RDS
	 Mute / Dimmer
	 Vol-
	 CH- / Page-
	 Eject / Surround
	 D.Menu / Top
	 Smart / List
	 Info / Angle





Original	Sustituto	Original	Sustituto
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	End		Exit / Cancel / Clear
	Down		Down
	Return		Shift + Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	truD		Shift + Text /
	Sleep		Shift + Sleep / Timer
	[<>]		Picture / Format
	OPC		Setup / OPT /
	Action		Display / Media

