

 

 

 



 
 
 

 


 
 





 


Original	Sustituto
Standby	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
P.P	Back
FAV	Pre Ch
DTV EPG	Guide
Input	AV
Mute	Mute
Audio	Dual

Original	Sustituto
Red/Sound	Red
Green/Picture	Green
Yellow/VGA	Yellow
Blue/TV	Blue
[=+]/Hold	Options
[=?]/Reveal	TV/R
[=◇]/Size	Format
[ / = ]	Smart
[=i]/Index	Shift + Info
[O]/Subpage	Media
[=]/Text	Text
Vol+	Vol +
Vol-	Vol -
CH+	Ch +
CH-	Ch -
PIP	3D
Wide	Eject





Original	Sustituto	Original	Sustituto
 Info	 Info		
 Sleep	 Sleep		
 Menu	 Menu		
 Exit	 Exit		
 Menu DTV	 D. Menu		
 Subtitle/Subtitle DTV	 Subt		
 CH View/CHList	 List		
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		
 OK	 Ok		

